


Measurement instruction: pass-through door/ceiling installation

Required tools: tape measure, pen, and the printed measurement guide

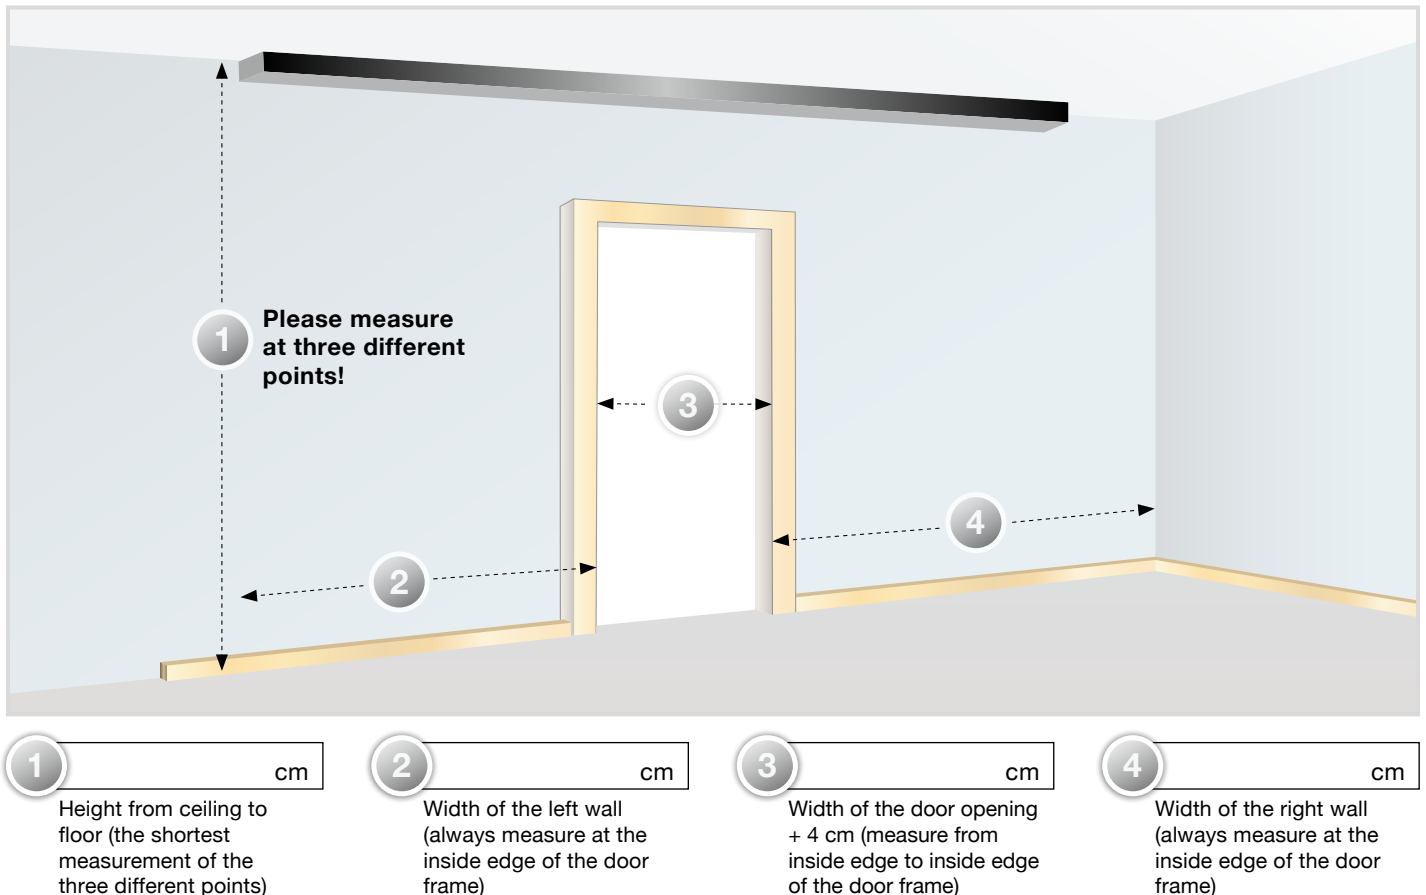

Step A:

First, measure ①, the height to the ceiling at three different points (the shortest measurement).

If your measurements vary by more than 2 cm, please contact us.

Then measure ③, the width of the door opening. In order to slide the door to the side, we need the width of the wall to the left and right of the doorway.

Enter all measurements (①, ②, ③, ④) in mm into the corresponding boxes.

Step B:

After measuring, you can quickly and easily enter the dimensions into the sliding door configurator at <https://www.Furnfab.com/en/products-sliding-doors>.

Note on the running tracks:

We make the width of the running tracks (top and bottom) exactly twice as wide as your opening, so that you can slide the door(s) completely to the side and fully open the passage.

Need help?

Our team is happy to assist you with any questions!

You can easily and quickly reach us by email, through our website, or by phone:

Email: service@furnfab.com

Contact form: <https://www.furnfab.com/en/contact>

Phone: +44 (0) 131 608 34 77